


How to change motor propeller or motor housing

1. Remove the 4 screws that hold the motor housing in position on top of the Stainless Steel body.



2. Remove the 2 rear screws that hold the motor housing to the back of the range hood body.

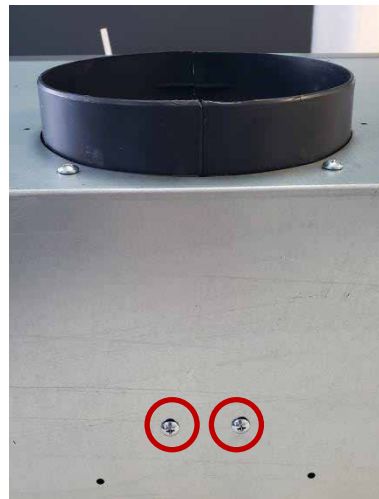

How to change motor propeller or motor housing

3. Remove 5 screws around the motor housing to open up the 2 pieces.



How to change motor propeller or motor housing

4. Once the Propeller is accessible, simply unscrew the nut on top. This is a reverse thread motion.



5. Once removed, simply reinstall new propeller and follow reverse steps to completion.


How to change motor propeller or motor housing

6. For motor housing, the motor will need to be removed and unplugged from the PCB.
7. Remove the 4 screws attaching the motor to the motor cage.
8. Remove the 2 screws holding the wire in its secure location.



How to change motor propeller or motor housing

9. Remove the 2 screws to open the larger of the 2 black box on top of the PCB.
10. Loosen the “L” shape plastic piece and move it out of the way of the wires.
11. Unplug the ground wire.

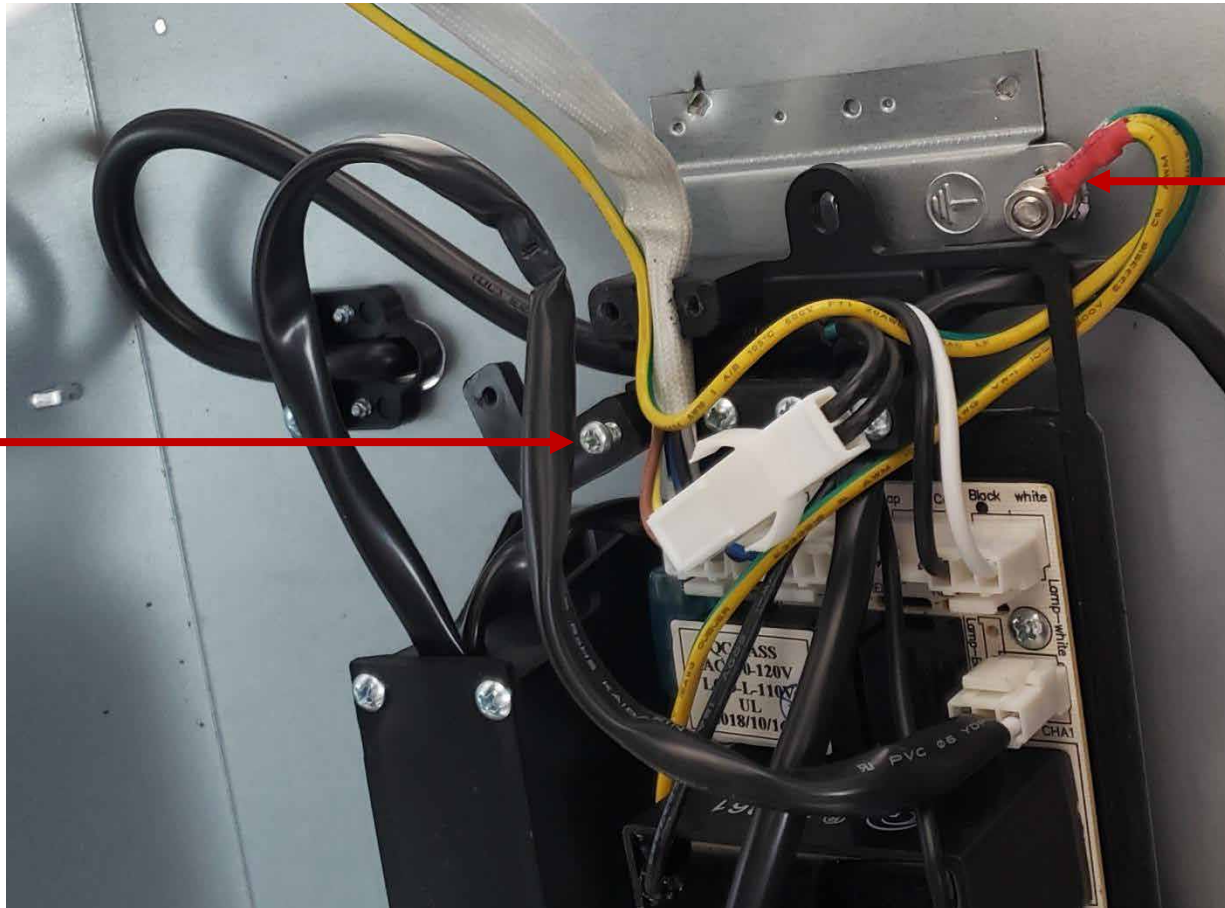


11. Unscrew
Ground wire from
its hankered screw
location


10. “L” shape wire
holder

How to change motor propeller or motor housing

12. Unplug all 6 wires from the PC Board (3 set of white plugs – connected with quick connect).
13. Once all unplugged, you can now remove wire from open motor housing.

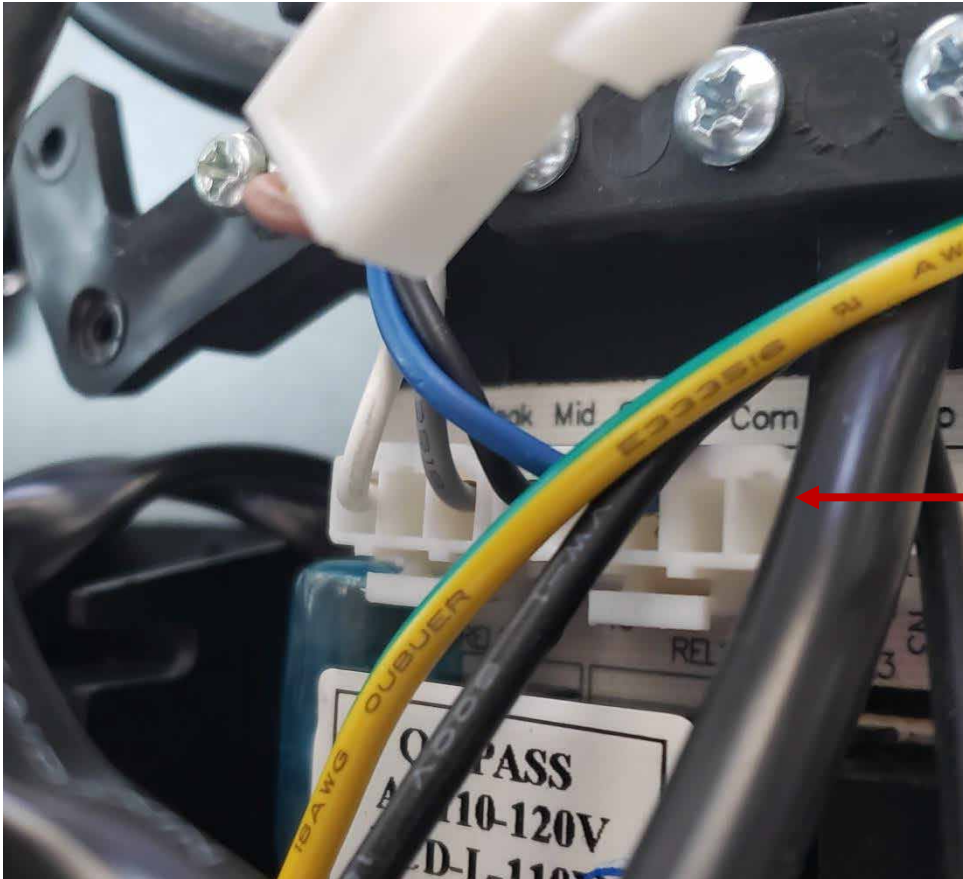


12. Unplug 3 white plugs with a total of 6 wires holder

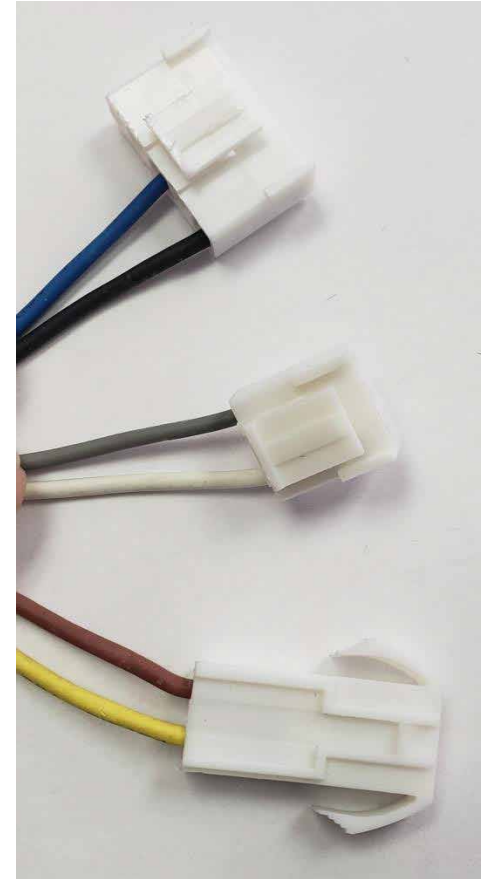

How to change motor propeller or motor housing

14. Using your new motor with pre-installed wires, screw in 4 motor screws to the motor housing.
15. Thread the wire through the housing and secure it with the plastic part and 2 screws.

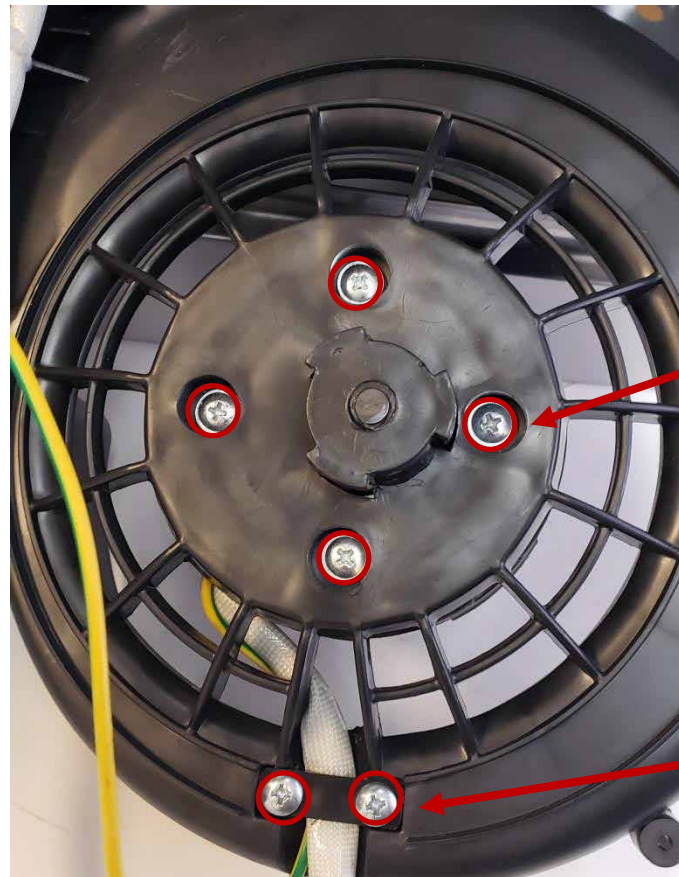

14. Screw 4 screws

15. Secure wire

How to change motor propeller or motor housing

16. Reconnect the ground in its original location,

17. Reconnect wires in the correct PC Board location following color coding below

17. Reinstall following color coding –
Order from top to bottom:

Blue →

Black →

Grey →

White →

Brown →

Yellow →



18. Once motor is reinstalled, put propeller in position, close motor housing, reinstall motor on top and rear of unit.