

**AINCOINA<sup>®</sup>**

**Range Hood  
Pro Pyramid 30 in. and  
36 in.**



**User Manual  
&  
Installation Instructions**

**IMPORTANT SAFETY INSTRUCTIONS**  
Carefully read the important information  
regarding installation, safety and maintenance.  
Keep these instructions for future reference.

MAAN1137-06  
2017-10-13

# Before You Begin

## **INSTALLERS - Start Here**

**Safety Instructions are on pages 4 and 5 and Installation Instructions are on pages 6 to 16.**

Please perform these steps:

1. Read the safety instructions.
2. Read all instructions in the Installation section of this manual BEFORE installing the range hood.
3. Remove all packing materials.
4. When finished, make sure to leave these instructions with the consumer.
5. Installation is to be done by a qualified technician only. However, the ultimate responsibility for proper installation falls to the owner.
6. Product failure due to improper installation is not covered under the Warranty.




## **CONSUMERS - Start Here**

**Safety Instructions are on pages 4 and 5 and Operating Instructions are on pages 17 and 18.**

Please perform these steps:

1. Read the safety instructions.
2. Read all instructions in the manual BEFORE operating the range hood.
3. Remove all packing materials.
4. Installation is to be done by a qualified technician only. However, the ultimate responsibility for proper installation falls to the owner.
5. Product failure due to improper installation is not covered under the Warranty.

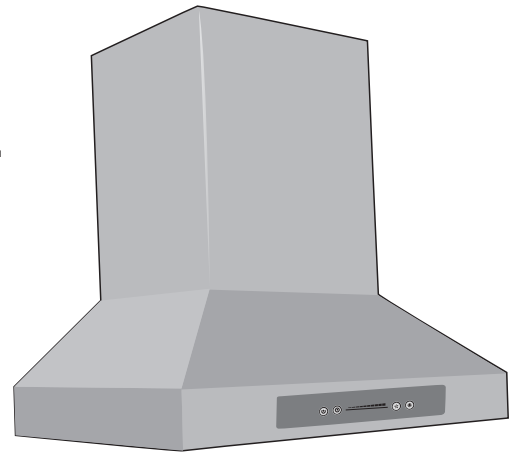

**Hardware Note:** For safety reasons, range hood mounting screws and anchors will not be included due to the variation of cabinetry constructions and wall material. Please consult your installation specialist regarding the optimal type of mounting screws and wall anchors to suit your home's construction.

# Table of Contents

Before You Begin.....	2
Table of Contents .....	3
Important Safety Information .....	4
Included Parts .....	6
Range Hood Dimensions .....	7
Specifications.....	7
Installation.....	8
Step 1 - Read the Safety Instructions.....	8
Step 2 - Unpack Range Hood and Prepare Tools.....	8
Step 3 - Plan Desired Location .....	8
Step 4 - Test Unit Functions .....	8
Step 5 - Venting Installation Guidelines .....	9
Step 6 - Prepare Motor Housing.....	10
Step 7 - Insert Motor Body Into Main Housing.....	10
Step 8 - Attach Motor Body to Main Housing .....	11
Step 9 - Join the Connectors.....	11
Step 10 - Mark Placement of Range Hood Mounting Screws.....	11
Step 11 - Mount Range Hood Onto Wall .....	12
Step 12 - Install Damper .....	12
Step 13 - Connect Ductwork .....	12
Step 14 - Connect to AC.....	12
Step 15 - Install Lower Chimney.....	13
Step 16 - Install Upper Chimney Bracket .....	14
Step 17 - Install Upper Chimney.....	14
Step 18 - Install Grease Trays .....	15
Step 19 - Install Baffle Filters .....	15
Operation .....	16
Using the Fan.....	16
Using the Time Delay Function .....	16
Turning the Light On or Off.....	16
Maintenance.....	17
Replacing the Light Bulbs.....	17
Cleaning the Range Hood.....	17
Replacement Parts.....	18

# Important Safety Information

## READ ALL INSTRUCTIONS BEFORE USE

Read and follow all instructions before using the range hood to prevent the risk of fire, electric shock, personal injury, or damage when using the range hood or appliances with the range hood. This guide does not cover all possible conditions that may occur. Always contact your service technician or manufacturer about problems that you do not understand.

- The installation in this manual is intended for qualified installers, service technicians or persons with a similar qualified background. Installation must be done by qualified professionals and in accordance with all applicable codes and standards, including fire-rated construction.
- The range hood may have very sharp edges; please wear protective gloves if it is necessary to remove any parts for installing, cleaning or servicing.
- Activating any switch to ON position before completing installation may cause damage or electric shock.
- Due to the size of this range hood, a two person installation is recommended.

### To reduce the risk of fire, electric shock, or injury to persons:

- For general ventilating use only. **DO NOT** use to exhaust hazardous or explosive materials and vapors.
- **WARNING:** To Reduce The Risk Of Fire Or Electric Shock, Do Not Use This Fan With Any Solid-State Speed Control Device.
- The combustion air flow needed for safe operation of fuel-burning equipment may be affected by this unit's operation. Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society of Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and other local code authorities.
- Before servicing or cleaning the unit, switch power off at service panel and lock the service

disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.

- Clean grease-laden surfaces frequently. To optimize performance and to disperse air properly, make sure to vent air outside. **DO NOT** vent exhaust into spaces between walls, crawl spaces, ceilings, attics or garages.
- Ducted fans **MUST** always be vented to the outdoors.
- This unit **MUST** be grounded and used with metal ductwork only.
- Sufficient air is needed for proper combustion and exhausting of gases through the duct to prevent back drafting.
- When cutting or drilling into wall or ceiling, be careful not to damage electrical wiring or other hidden utilities.
- All electrical wiring must be properly installed, insulated and grounded.
- Old ductwork should be cleaned or replaced if necessary to avoid the possibility of a grease fire.
- Check all joints on ductwork to ensure proper connection; all joints should be properly taped using a certified aluminum or foil tape.
- Use this unit only in the manner intended by the manufacturer. If you have questions, contact the vendor.

## READ AND SAVE THESE INSTRUCTIONS

# Important Safety Information

## **WARNING: TO REDUCE RISK OF A RANGE TOP GREASE FIRE:**

- a) Never leave surface units unattended at high settings. Boilovers cause smoking and greasy spillovers that may ignite. Heat oils slowly on low or medium settings.
- b) Always turn range hood ON when cooking at high heat or when flambéing food (i.e. Crepes Suzette, Cherries Jubilee, etc.).
- c) Clean ventilating fans frequently. Grease should not be allowed to accumulate on fan or filter. Before servicing or cleaning unit, unplug and disconnect the hood from the power supply.
- d) Use proper pan size. Always use cookware appropriate for the size of the surface element.

## **WARNING: TO REDUCE RISK OF INJURY TO PERSONS IN THE EVENT OF A RANGE TOP GREASE FIRE, OBSERVE THE FOLLOWING \***

- a) SMOTHER FLAMES with a close-fitting lid, cookie sheet, or metal tray, then turn off the burner. BE CAREFUL TO PREVENT BURNS. If the flames do not go out immediately, EVACUATE AND CALL THE FIRE DEPARTMENT.
- b) NEVER PICK UP A FLAMING PAN - You may be burned.
- c) DO NOT USE WATER, including wet dishcloths or towels - a violent steam explosion will result.
- d) Use an extinguisher ONLY if:
  - 1) You know you have a Class A, B, C extinguisher, and you already know how to operate it.
  - 2) The fire is small and contained in the area where it is started.
  - 3) The fire department is being called.
  - 4) You can fight the fire with your back to an exit.

\* Based on "Kitchen Fire Safety Tips" published by NFPA


## **To reduce the risk of injury to persons in the event of a gas leaks:**

- Extinguish any open flame.
- DO NOT turn on the lights or any type of appliance.
- Open all doors and windows to disperse the gas. If you still smell gas, call the gas company and fire department.


Your safety and the safety of others is very important. We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages. All safety messages outline any potential hazards, how to reduce the chance of injury, and possible risks if the instructions are not followed.

## **READ AND SAVE THESE INSTRUCTIONS**


# Included Parts

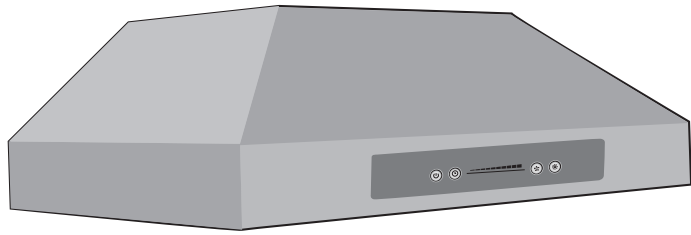


Main Housing

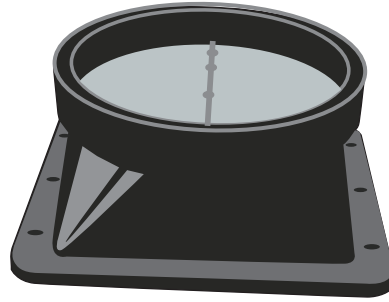


Metal damper

 

10 x Main Housing Screws  
4 x Damper Screws  
2 x Upper Chimney Screws

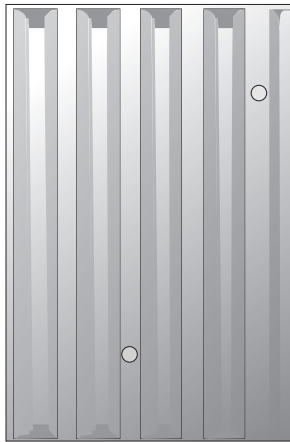

Baffle Filters x 2

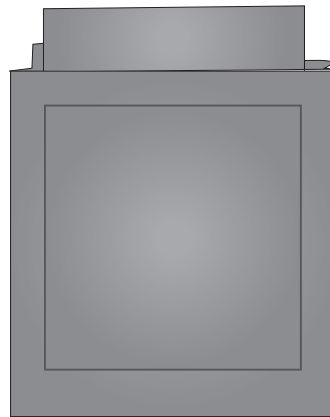

Motor Body




4 x Handle Screws




4 x Split washers




4 x Handles

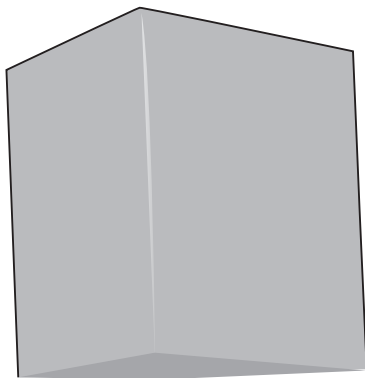


Lower Chimney

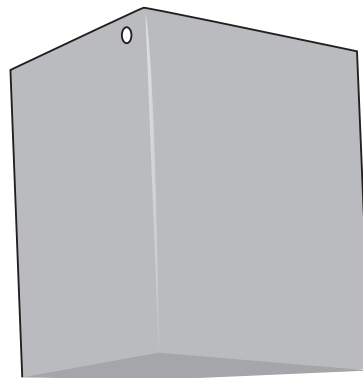

Upper Chimney

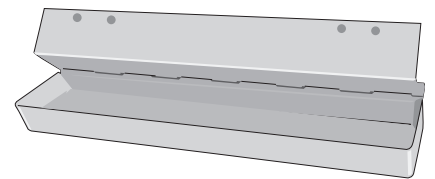

Grease Trays x 2

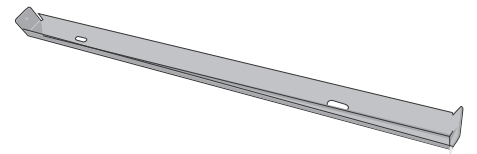


Upper Chimney Bracket



**Hardware Note:** For safety reasons, range hood mounting screws and anchors will not be included due to the variation of cabinetry constructions and wall material. Please consult your installation specialist regarding the optimal type of mounting screws and wall anchors to suit your home's construction.

# Range Hood Dimensions

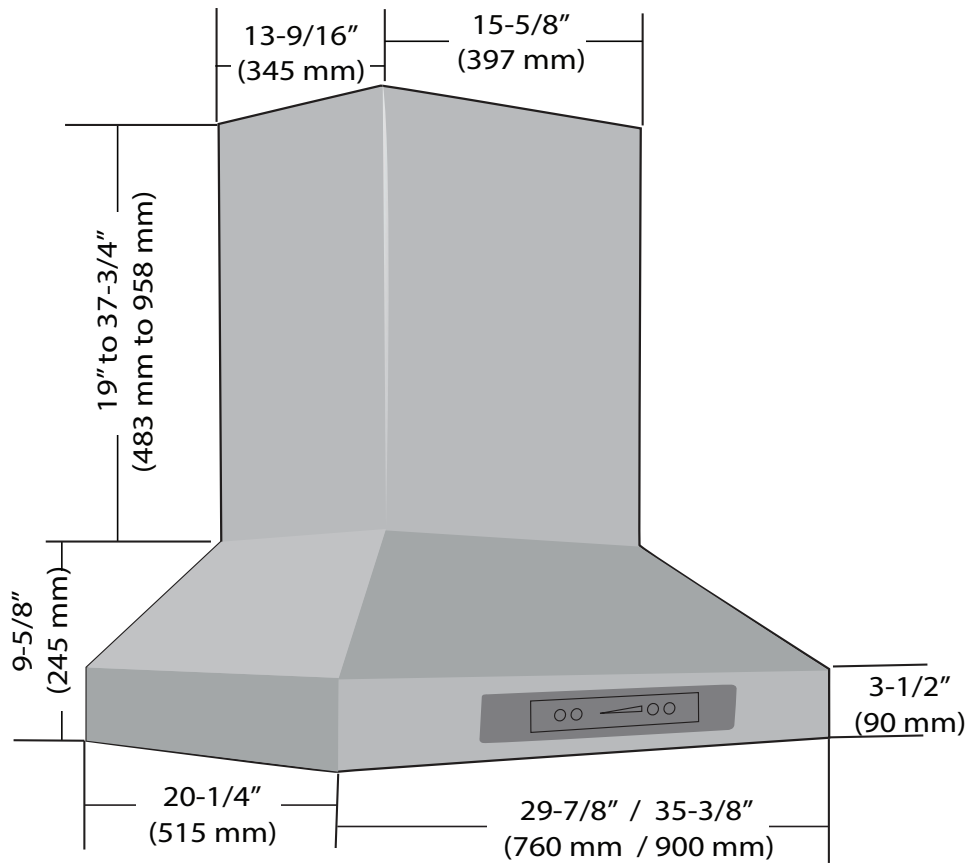

## Specifications

Body Design	Stainless Steel
Power Rating	120 V / 60 Hz (cETLus Certified)
Total Input Power	406 W
Motor Input Power	400 W
Amperage	3.40 A
Fan	775 CFM
Speed Control Levels	4 Speeds + Booster
Interference Protection	Radio Frequency Interference Protected
Noise Level	Low Speed : 44 dB
Motors	Single Motor
Control	Electronic Slide Touch Panel
Filtration	Stainless Steel Baffle Filters
Illumination	2 x 3 W LED
Venting Size	Outer 7.3" (185mm), Inner 6.7" (170mm)

# Installation

---

## STEP 1

### Read the Safety Instructions

- It is very important to read the safety instructions on pages 4 and 5.

**IMPORTANT: It is the installer's responsibility to comply with installation clearances.**

---

## STEP 2

### Unpack Range Hood and Prepare Tools

- Carefully unpack the range hood and parts. Make sure all parts are included as shown on page 6.
  - DO NOT remove the protective film covering the appliance until the installation is fully completed.
  - Consult a qualified and trained installer or check local codes for makeup air requirement, if any.
- 

## STEP 3

### Plan Desired Location

- Plan a desirable location that fits all requirements in the Safety and Installation sections of this manual. Plan where and how the ductwork will be installed.
  - A straight or short duct run will allow the unit to perform most efficiently. Long duct runs, elbows and transitions will reduce the performance of the unit. Each elbow is equivalent to 5 to 10 feet of straight run. Proper size duct work should be 7" (178 mm) in diameter.
  - **To reach a 9 foot ceiling make sure hood is installed 30 inches from cooking surface. If you have a ceiling greater than 9ft, please visit [anconahome.com](http://anconahome.com) to order a chimney extension.**
  - If ductwork is already installed: ensure ductwork is free from debris and measures 7" (178 mm) (1" reducers may be used but more than 1" will overwork the motor and the unit will not function properly).
  - **This unit's damper is located 28" (712 mm) from bottom of range hood, therefore rear venting requires a higher wall aperture for duct than standard. Please calculate position for duct on wall BEFORE installing this product (See Height and Clearance illustration on page 9).**
  - Only one flange is needed in the air duct system, either on top of the motor (provided) or outside.
- 

## STEP 4

### Test Unit Functions

- Plug the unit in and test all of the functions before installing.

#### **WARNINGS:**

- Please make sure to read ALL safety instructions on pages 4 and 5.
- Use two or more people to move and install range hood.
- Failure to follow these instructions can result in serious injury.



# Installation

## STEP 5

### Venting Installation Guidelines

- The following steps are for exterior ventilation.


#### IMPORTANT:

- Vent system must terminate to the outside (roof or side wall).
- DO NOT terminate the vent system in an attic or other enclosed area.
- DO NOT use 4" (10.2 cm) laundry-type wall caps.
- Use metal/aluminum vent only. A rigid metal/aluminum vent is recommended.
- DO NOT use a plastic vent.
- Always keep the duct clean to ensure proper airflow.
- Calculate the following figures before installation:
  1. Distance from the floor to the ceiling
  2. Distance between the floor and the countertop/stove
  3. A distance of 24" to 30" is recommended between stove top and the bottom of range hood. 30" minimum is required for gas stove tops.
  4. Height of hood and duct cover.

#### For the most efficient & quiet operation:

- It is recommended that the range hood be vented vertically through the roof through 7 in. (178 mm) or bigger round metal/aluminum vent work.
- The size of the vent should be uniform.
- Use no more than three 90° elbows.
- Make sure there is a minimum of 24" (61 cm) of straight vent between the elbows if more than one elbow is used.
- DO NOT install two elbows together.
- The length of vent system and number of elbows should be kept to a minimum to provide efficient performance.
- The vent system must have a damper. If roof or wall cap has a damper, you may remove damper flaps from damper to increase air flow.
- Use silver tape or duct tape to seal all joints in the vent system.
- Use caulking to seal exterior wall or roof opening around the cap.

## Height and Clearance

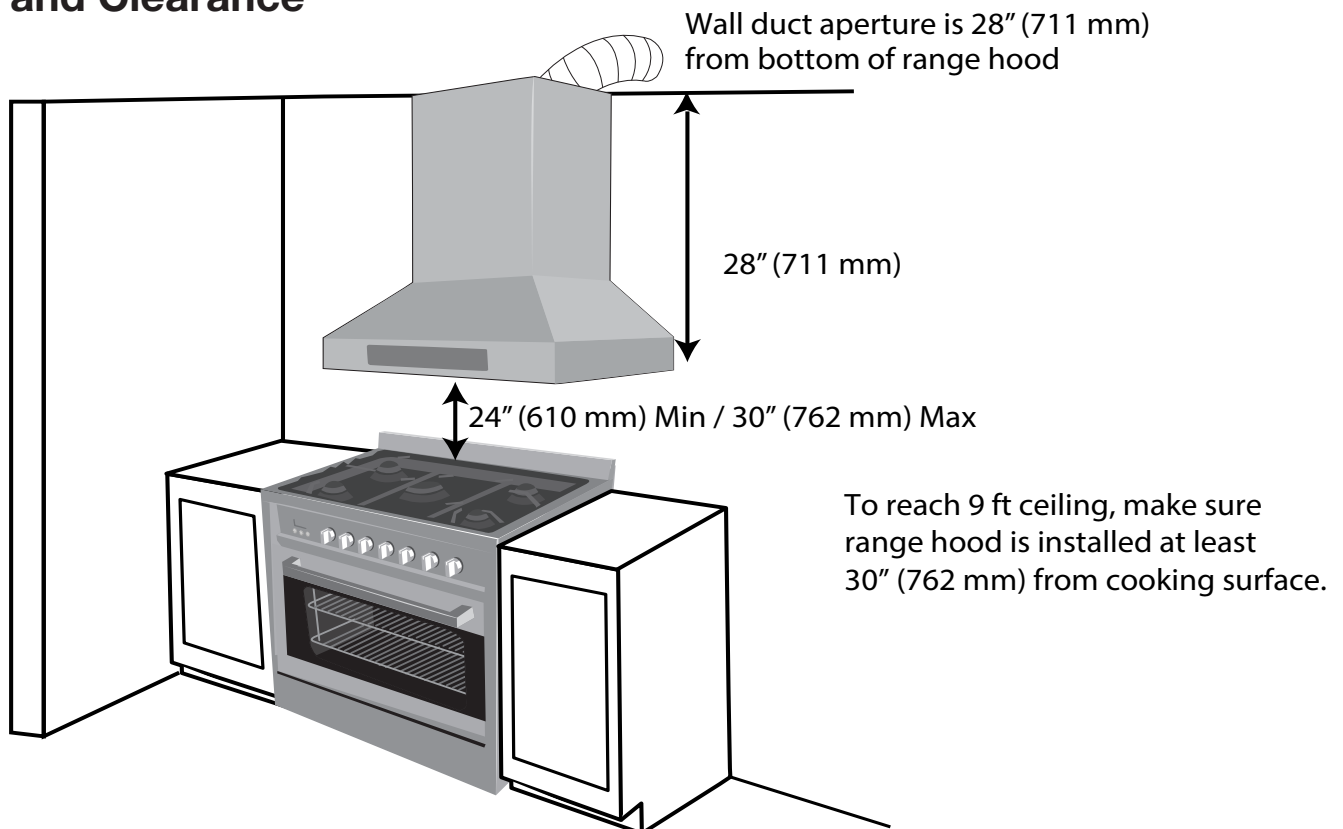


# Installation

## STEP 6

### Prepare Motor Body



- Place the motor body on the edge of a flat surface, such as the corner of a table.
- To protect the flat surface from scratches, place the first square piece of styrofoam that you see when the motor body box is opened, on the flat surface.

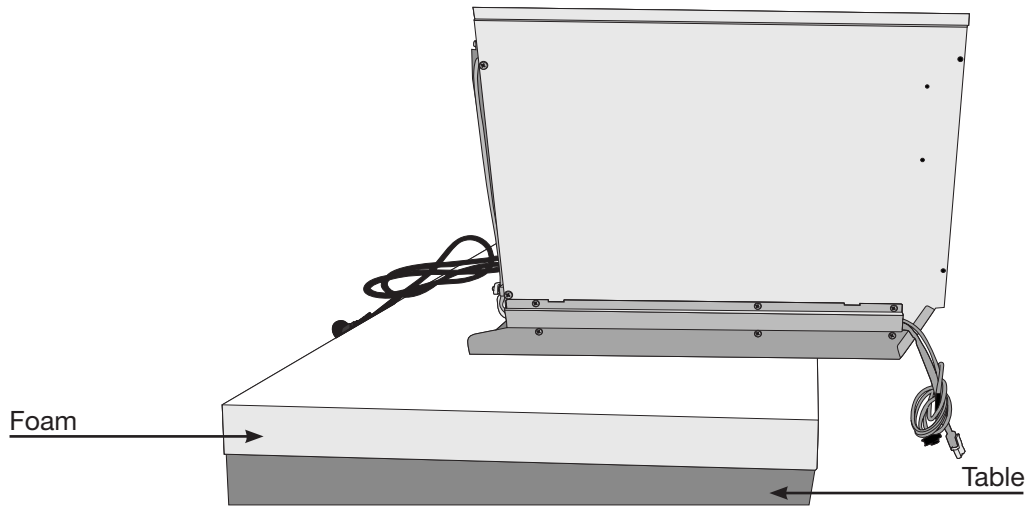

## STEP 7

### Insert Motor Body into Main Housing

- Place the main housing over the motor body as shown below.
- Ensure the motor door and black controls on front panel of range hood are facing upwards.
- Fit the top edge of motor body (A) into the main housing.
- Next fit the bottom edge of motor body (B) into the main housing.

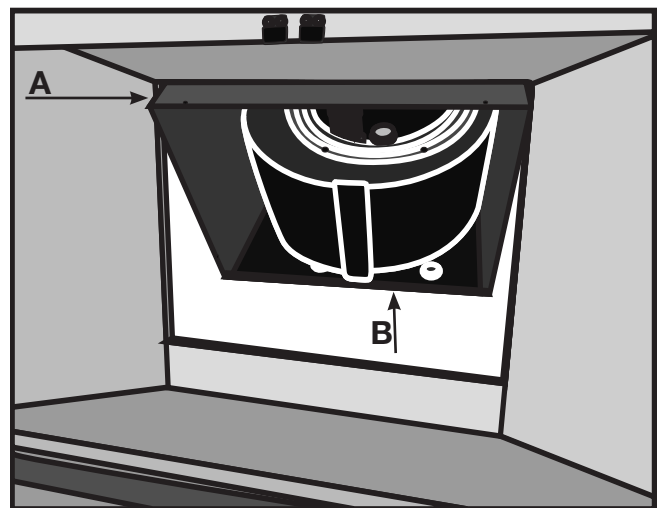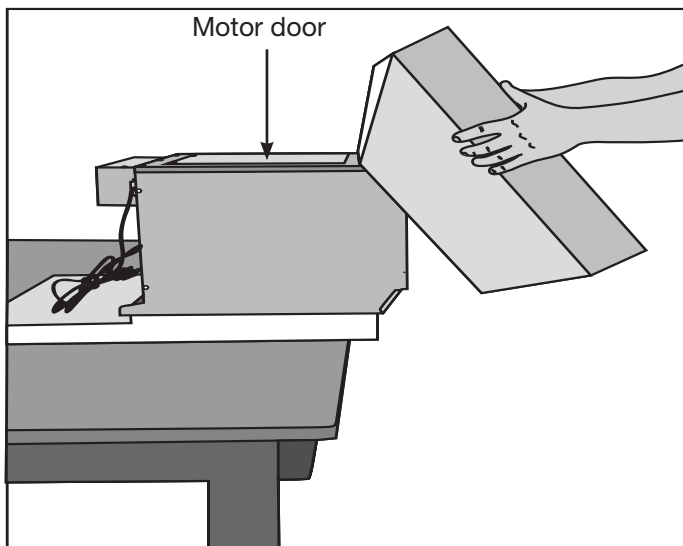



Front View

# Installation

## STEP 8

### Attach Motor Body to Main Housing


- Align the 3 screw holes on the bottom edge of the Motor Body with the 3 holes on the bottom edge of the Main Housing.
- Then align the remaining 9 screw holes and screw together the two pieces using the screws provided.

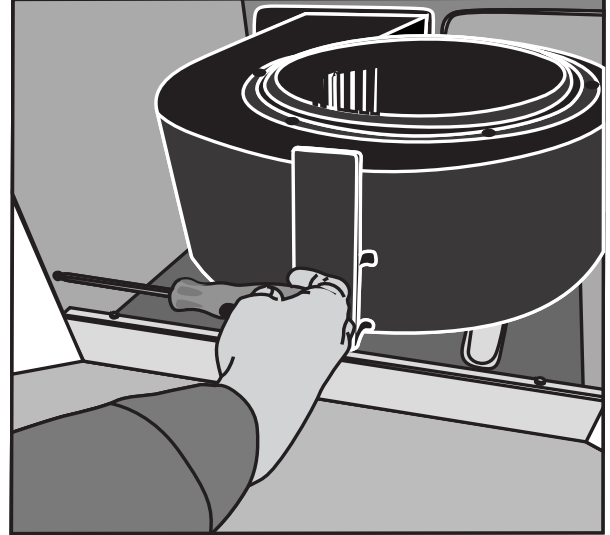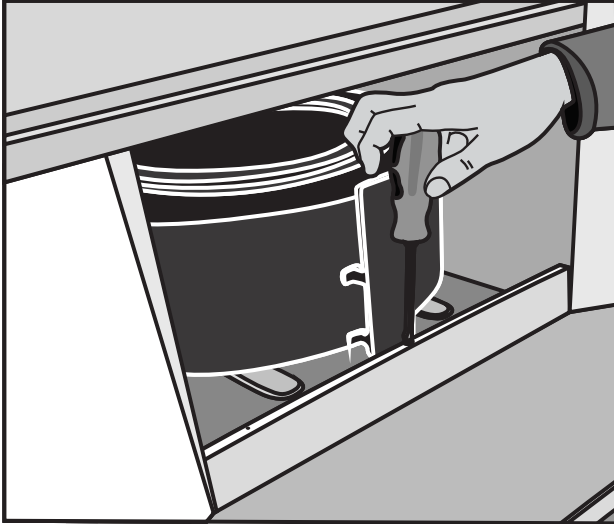

## STEP 9

### Join the Connectors


- Join together the quick connectors at the back of the main housing and motor body.

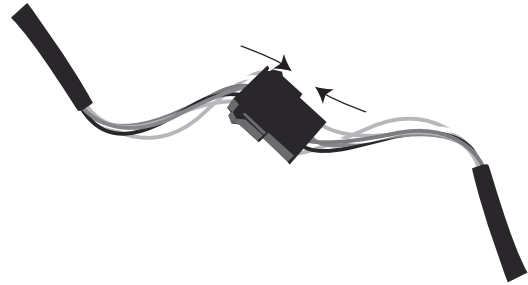

## STEP 10

### Mark Placement of Range Hood Mounting Screws


- Use a pencil to mark on the wall the desired placement of the range hood mounting screws.
- Screw two wood screws (not provided) into wall.
- Leave approximately 1/4" (6.3 mm) of the screw head protruding from the wall to allow clearance for mounting the range hood.
- Use threaded drywall anchors when mounting the range hood onto sheet rock. Mounting the hood into wall studs or lumbers is highly recommended.

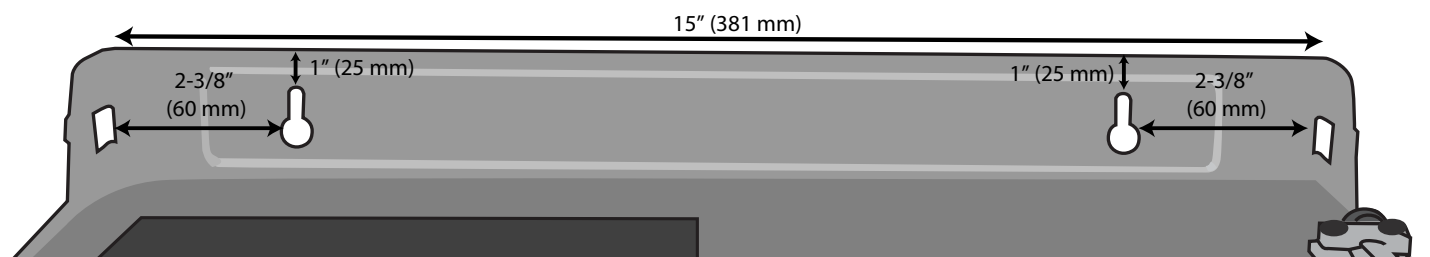

## STEP 11

### Mount Range Hood Onto Wall



- Position the range hood's mounting key holes securely onto the range hood mounting screws.
- Finish screwing in the screws until they cannot tighten any further.

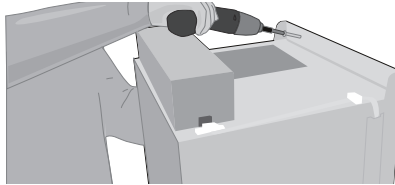

## STEP 12

### Install Damper

- Place the damper over the ventilation hole on top of the motor body.
- Secure using the four screws (included).

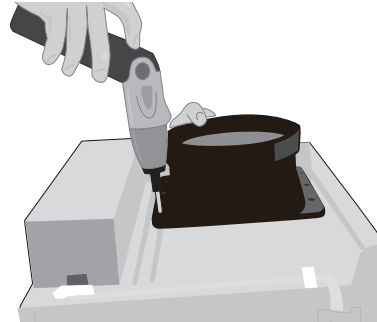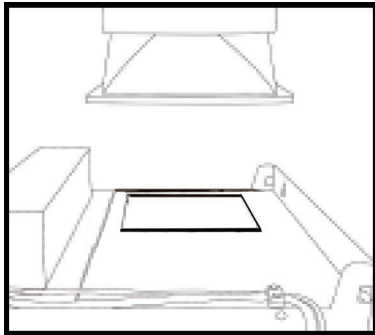

## STEP 13


### Connect Ductwork

- Attach ductwork to damper. Secure the ductwork with duct tape to make sure joints are secure and air-tight.
- Do not install the duct tape too tightly as this may prevent the damper flaps from opening which will overwork the motor and cause improper functioning of the unit.
- Fasten all connections with sheet metal screws and tape all joints with certified aluminum or foil tape. Use caulking to seal exterior wall or roof opening around the cap.

## STEP 14

### Connect to AC

- Connect AC plug into a grounded AC outlet having 120V, 60Hz. Place the outlet at a maximum distance of 33-1/2" (851 mm) from where the cord exits on the hood.
- SEE IMPORTANT INSTRUCTIONS ON THE FOLLOWING PAGE.

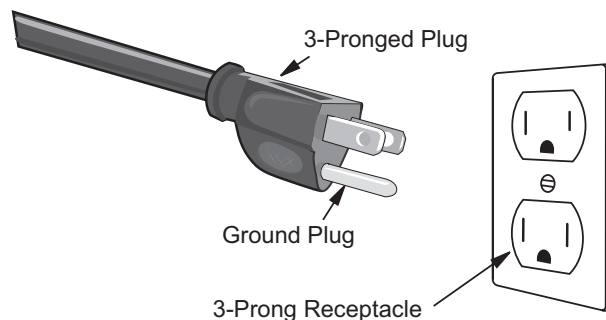

# Installation

## IMPORTANT:

- Observe all governing codes and ordinances.
- **It is the customer's responsibility to contact a qualified electrical installer.**
- If codes permit and a separate ground wire is used, it is recommended that a qualified electrician determine that the ground path is adequate. A 120-Volt, 60 Hz, AC-only, fused electrical supply is required on a separate 15-amp circuit, fused on both sides of the line.
- DO NOT ground to a gas pipe.
- Check with a qualified electrician if you are not sure that the range hood is properly grounded.
- DO NOT have a fuse in the neutral or ground circuit.

**IMPORTANT: Save this Installation Guide for electrical inspector's use.**

## GROUNDING INSTRUCTIONS:

- This appliance must be grounded. In the event of an electrical short-circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current.
- This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

**WARNING:** Improper grounding can result in a risk of electric shock.

- Consult a qualified electrician if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded. DO NOT use an extension cord. If the power supply cord is too short, have a qualified electrician install an outlet near the appliance.

## STEP 15

### Install Lower Chimney

- Place lower chimney on top of the main housing.




# Installation



## STEP 16

### Install Upper Chimney Bracket

- Position the upper chimney bracket onto the wall directly below the ceiling. Align the upper chimney bracket with the range hood below.
- Use a pencil to mark desired placement of the upper chimney bracket on the wall.
- Use two wood screws (not provided), and screw the upper chimney bracket into the wall.
- Use threaded drywall anchors when mounting the bracket onto sheet rock. Mounting the upper chimney bracket into wall studs or lumbers is highly recommended.

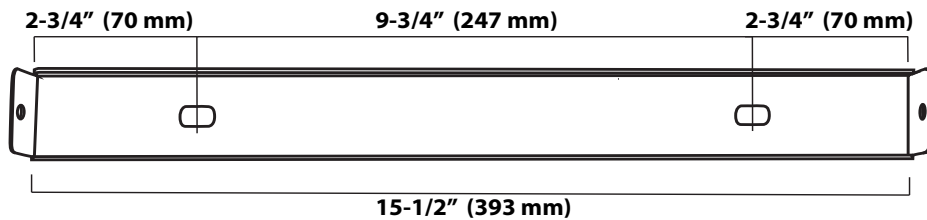


Align the upper chimney bracket with the range hood below.

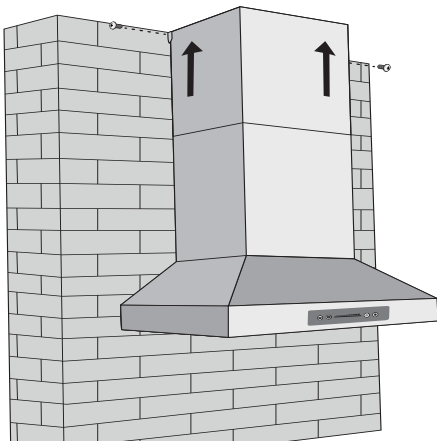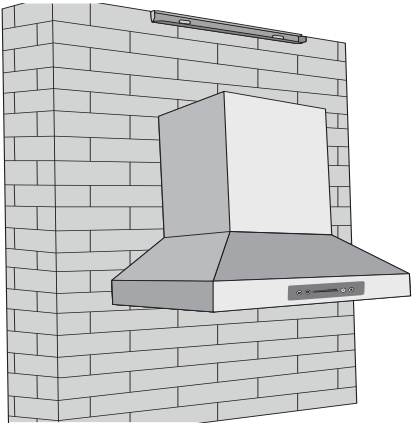

## STEP 17

### Install Upper Chimney

- Remove the protective film from the upper chimney. Carefully slide the upper chimney inside the lower chimney.
- Extend the telescopic upper chimney until it reaches the upper chimney bracket and attach the upper chimney to the bracket using the provided screws.
- Peel off protective film from the rest of the range hood.

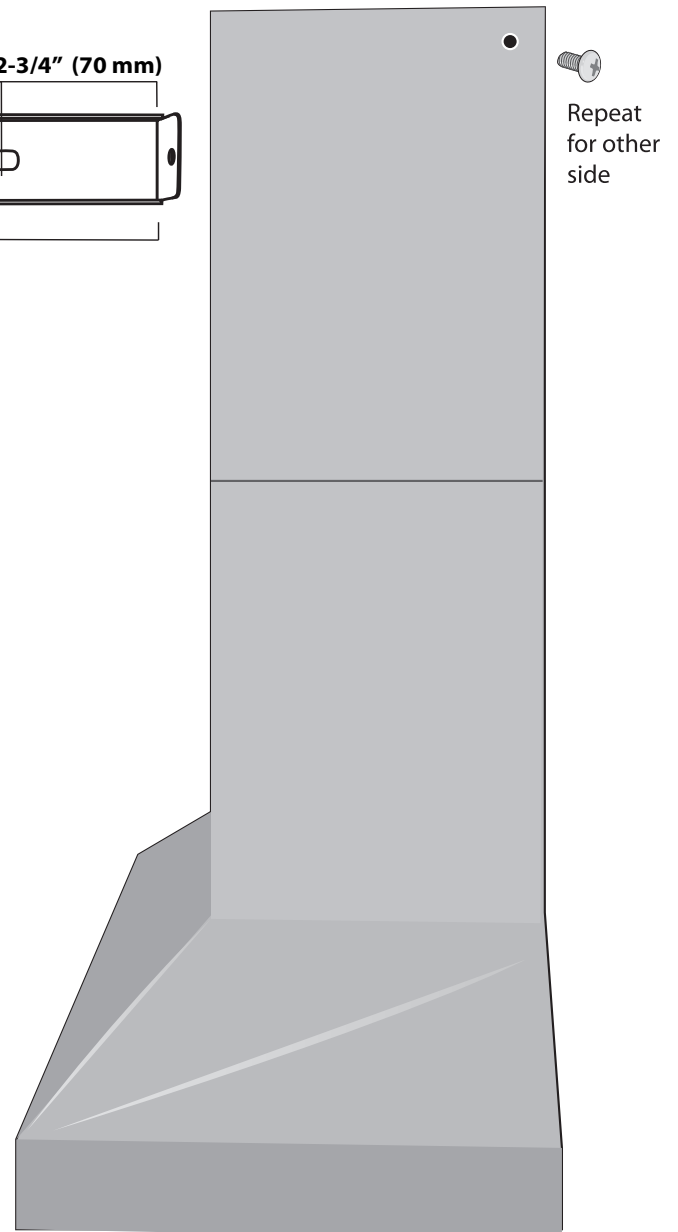


# Installation

## STEP 18

### Install Grease Trays


- Place the grease trays into the track at the back of the range hood.
- Slide them left and right until all trays are placed side-by-side in the track.
- The baffle filters and grease trays should be cleaned once a month, or as needed. See page 18 for cleaning instructions.

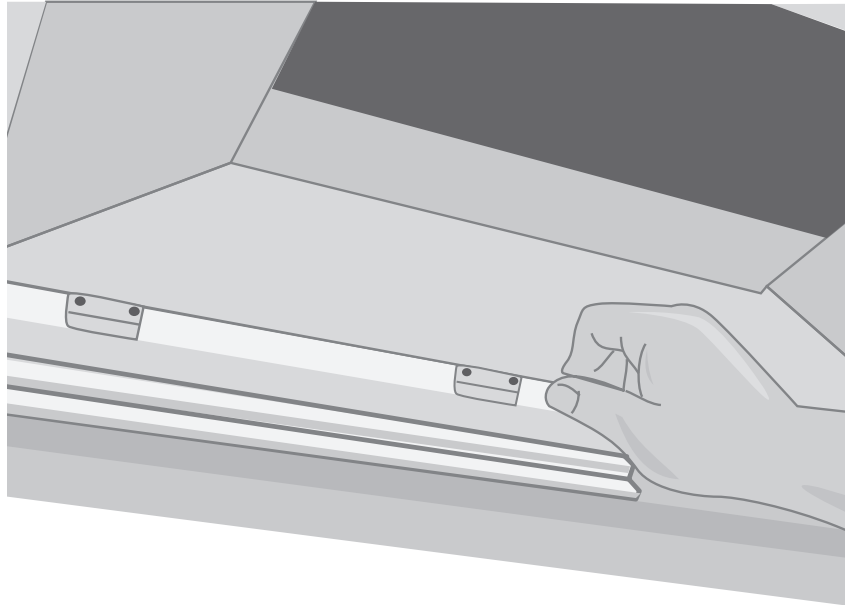

## STEP 19


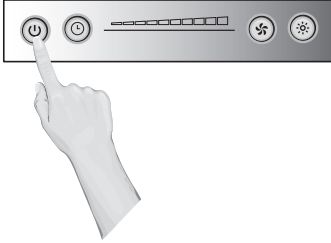

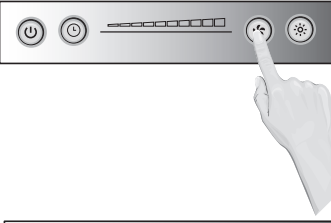
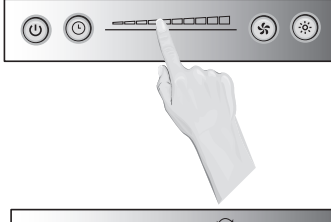
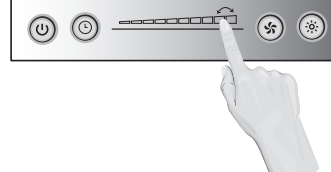
### Install Baffle Filters

- Hold the baffle filter by the two knobs.
- Place the front of the baffle against the interior front of the range hood.
- Slide it up and push the rear of the filter back until it sits securely.
- The baffle filters channel grease released by cooking foods into the grease trays and prevent flaming foods on the cook top from damaging the inside of the range hood. For this reason, the baffle filters must **ALWAYS** be installed during range hood use.
- The baffle filters and grease trays should be cleaned once a month, or as needed. See page 18 for cleaning instructions.

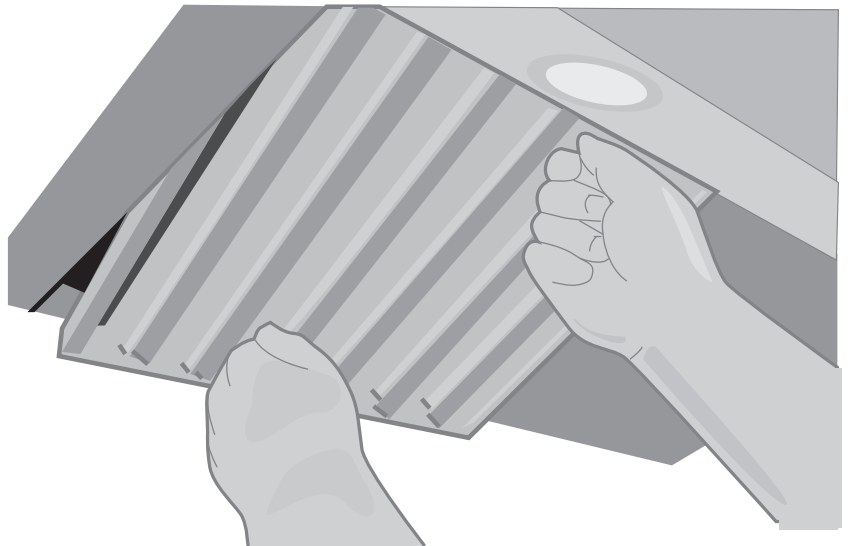
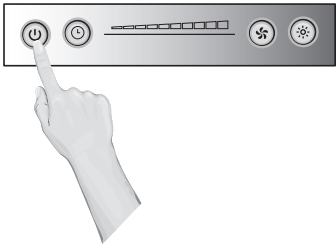

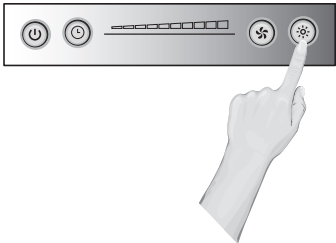

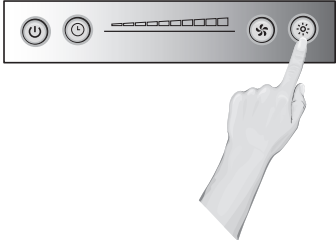


# Operation


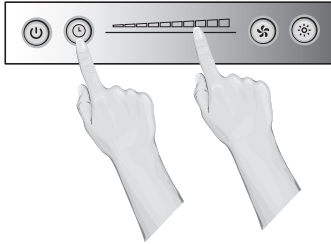


## Using the Fan

- 1** Press the  button to turn the unit on. 
- 2** Press the  button to turn on the fan. 
- 3** Touch the sensor bar to select any of the 4 speeds desired. 
- 4** Slide finger at the last two segments to activate Booster mode and to increase motor power for 2.5 minutes. During this time, the segments will flash. 

## Turning the Light On or Off

- 1** Press the  button to turn the range hood on. 
- 2** Press the  button to turn the light on. 
- 3** Press the  button again to turn the light off. 

## Using the Time Delay Function


- 1** To set the Time Delay Function, press  the timer button and slide your finger from left to right along the sensor bar to select the desired time period. Time will increase by 5-minute segments to a maximum of 50 minutes. The timer button will flicker once the Time Delay Function has been activated. 
- 2** Press the  button to turn the fan off. 




# Maintenance

## Replacing the Light Bulbs

- 1 Unplug the unit from the AC outlet.
- 2 Remove five screws from the light panel, then remove the light bulbs by popping them out.

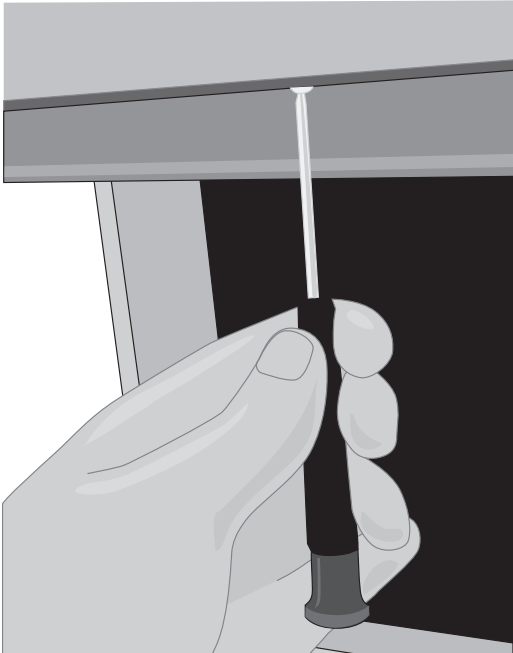

- 3 Disconnect the light clip.

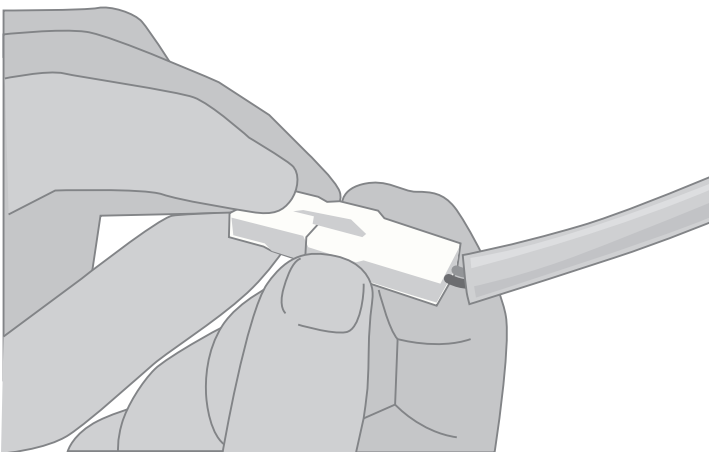

- 4 Reverse the removal procedures to install the new light bulbs and plug the unit back in.

## Cleaning the Range Hood




Be sure electrical power is off and all surfaces are cool before cleaning or servicing any part of the hood.

### Range Hood Body

- Do not use a steel wool pad; it will scratch the surface.
- To clean the stainless steel surface, use warm soapy water or a stainless steel cleaner. Closely follow the cleanser label instructions. DO NOT use corrosive or abrasive detergents, ammonia products, abrasives or oven cleaners. Always wipe the surface in the direction of the grain.









### Baffle Filters and Grease Trays

- The saturation of greasy residue in the fan and filters may cause increased inflammability. Keep unit clean and free of grease and residue build-up at all times to prevent possible fires.
- Baffle filters and grease trays can be cleaned in a standard dishwasher or by using a mild cleaner. DO NOT use corrosive or abrasive detergents, ammonia products, or oven cleaners.
- To remove, first drain and wipe all excess grease with a dry paper towel. Grasp the baffle filter knobs and pull them up, forward and out. Grasp the grease trays and carefully lift them up and out of the hood track.

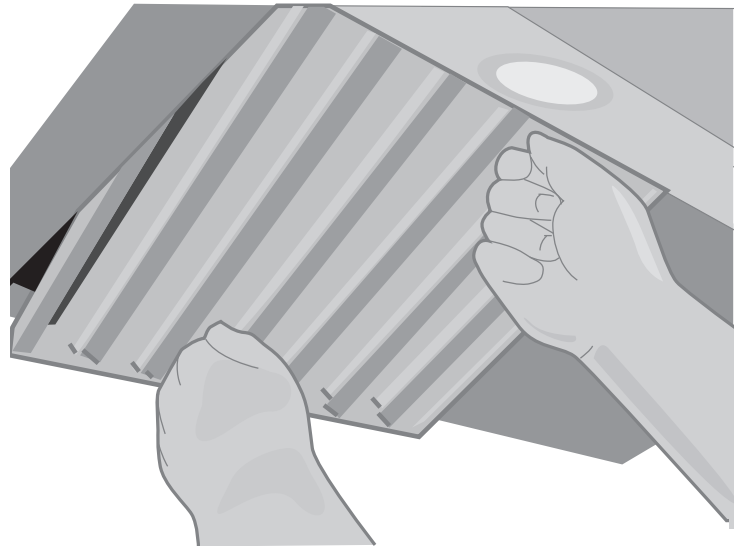


- When cleaning is completed, replace the grease trays and baffle filters as shown in Step 18 and Step 19.


# Replacement Parts

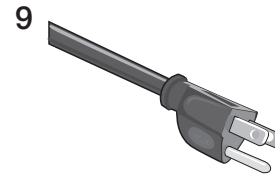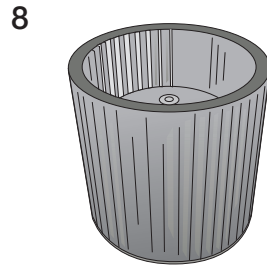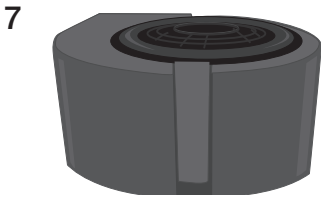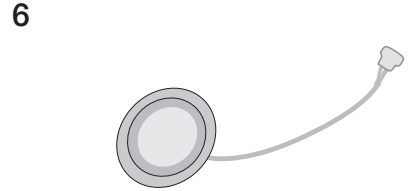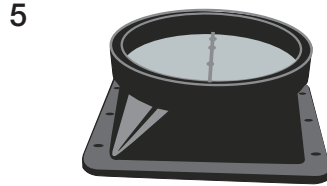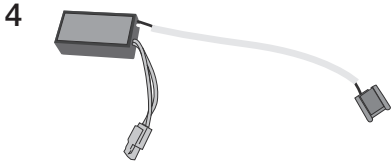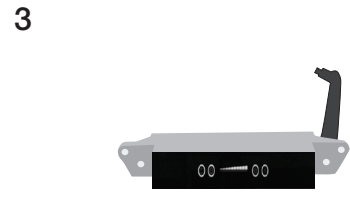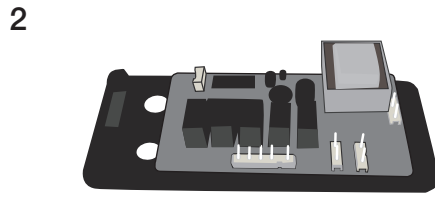

10A & 10B

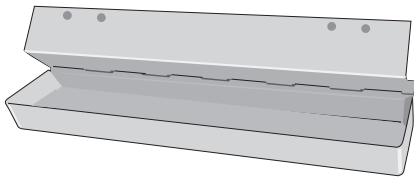

17

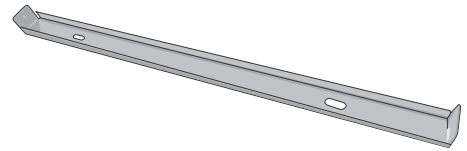

Description	Part Code
1 - Capacitor	PACAP-15
2 - Circuit Board	PABRD-14
3 - Control Panel	PACPL-17
4 - Transformer	PATRA-13
5 - Damper	PADAM-17
6 - Light Bulb	PALIT-14
7 - Motor	PAMOT-36
8 - Squirrel Cage	PAMCG-12
9 - Power Cord	PAPWR-12
10A - Grease Tray 30"	PAGTR-01

Description	Part Code
10B - Grease Tray 36"	PAGTR-02
12 - Light Panel 30"*	PALPL-20
13 - Light Panel 36"*	PALPL-21
14 - Hardware Bag*	PASCR-16
15 - Baffle Filter 30"*	PA02047
16 - Baffle Filter 36"*	PA02048
17 - Upper Chimney Bracket	PAUCB-15
18 - Chimney Set*	PA04015

\*Not Shown.  
See page 6 for illustration of items 15 and 16.

Please register your product warranty by visiting the Ancona Home website.



Canada & USA  
Phone: 1-800-350-4562  
Fax: 800-350-8563  
Email: [service@anconahome.com](mailto:service@anconahome.com)  
Website: [www.anconahome.com](http://www.anconahome.com)

Ancona is in association with Mr Appliance for all after sales service calls.  
Please contact their service provider or visit their website:

Phone: 888-998-2011  
Website: [www.mrappliance.com](http://www.mrappliance.com)



MAAN1137-06