




## Eleganza




Widespread Lavatory Bathroom Faucet

### STANDARDS

- ASME A112.18.1/CSA B125.1
- ASME A112.18.2/CSA B125.2
- LISTED IAPMO/cUPC

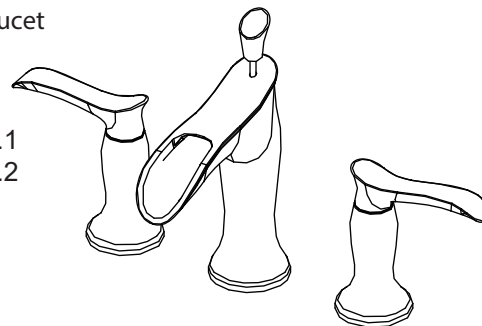


## Flow Rate Chart

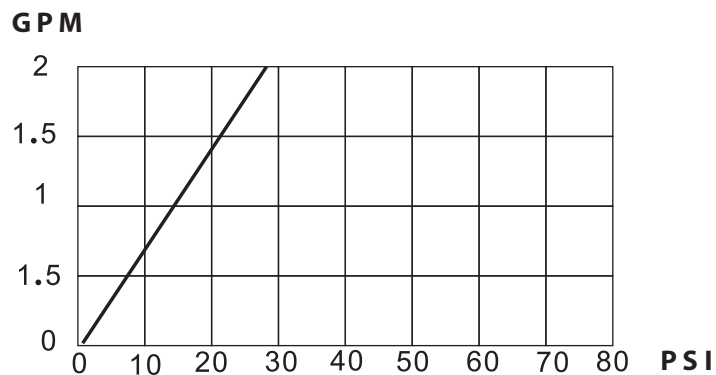

## Helpful Information

### Tools:

Gather the necessary tools as shown below to complete the installation of this faucet. Some may not be needed depending on the model of faucet you are installing. Check with your local hardware store on the requirements of your installation situation.

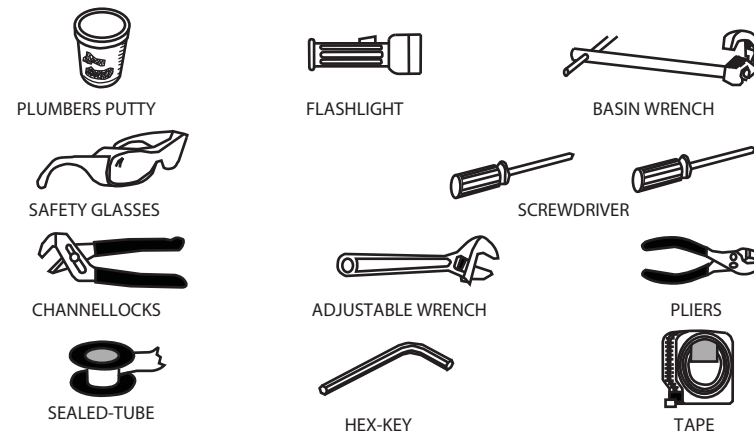


**WARNING:**  
Please keep the tools for future use!

### Attention:

For easy installation, you will need:


- To read all the installation instructions completely before beginning.
- To read all the warning, attention and maintenance information.
- To purchase the proper supply lines.

### Important

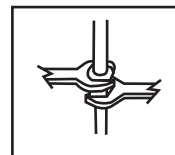

Tighten connection with two wrench to prevent damage to tube body. Be careful not to bend the stem as this will void the product warranty.

Connect to water supply lines with either:  
(A) 3/8" O.D.copper tubing (ball nose risers with the coupling nuts or;  
(B) 3/8" copper tubing (no ball) with supplied tube head interior connector or;  
(C) IPS faucet connectors (1/2" ) .

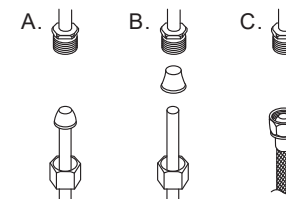

### Installation size map

Dimensions for the three-lever faucet (left):

- Spout height: 4 1/2 in. (115 mm)
- Spout width: 4 5/8 in. (117.3 mm)
- Spout depth: 3 9/16 in. (89.8 mm)
- Mounting hole spacing: 2 5/16 in. (58 mm)
- Mounting hole diameter: 2 3/16 in. (55 mm)
- Mounting hole depth: 1 3/16 in. (30 mm)
- Mounting hole diameter: 1 3/16 in. (30 mm)
- Mounting hole spacing: 8 - 12 in. (203 - 304 mm)
- Mounting hole diameter: 1/2-14NPSM

Dimensions for the single-lever faucet (right):

- Spout height: 8 1/8 in. (206.5 mm)
- Spout width: 6 11/16 in. (169.4 mm)
- Spout depth: 5 1/2 in. (140.3 mm)
- Mounting hole spacing: 4 1/8 in. (104.3 mm)
- Mounting hole depth: 1 3/16 in. (30 mm)
- Mounting hole diameter: 1 3/16 in. (30 mm)
- Mounting hole spacing: 8 - 12 in. (203 - 304 mm)
- Mounting hole diameter: 1/2-14NPSM


### Tools might be applied to the following places:

Tools and their application:

- Screwdriver: Used to install the mounting bracket.
- Wrench: Used to install the mounting nut.
- Loctite: Used to apply Loctite to the mounting nut.


## Faucet Installation

**1**

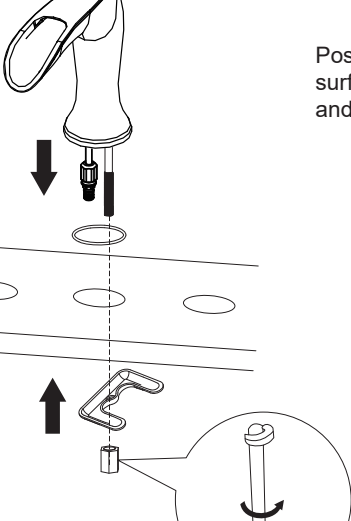

Position the body with o-ring on the installation surface as shown, secure it with metal washer and tighten the lock nut with basin wrench.


**2**

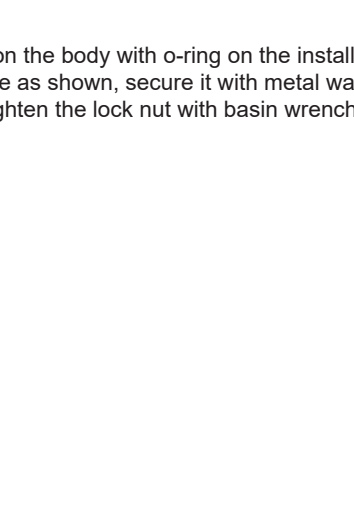


Position the handle on installation surface as shown and secure it with fixing kit and tighten the screw with screwdriver. Repeat the above steps for the other handle.

**Caution: please be careful with the position of hot and cold handles.**

3

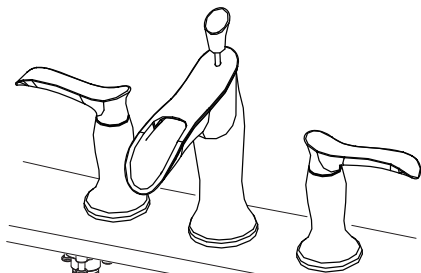


Position the flexible hose and fix it to the faucet as shown with clamp spring.

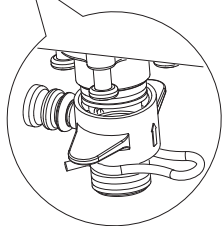

4

Connect the water supply lines to faucet and water supply valve and tighten with wrench.


**Warning:** The water supply valves mentioned above are not included, please purchase them at your local hardware store.

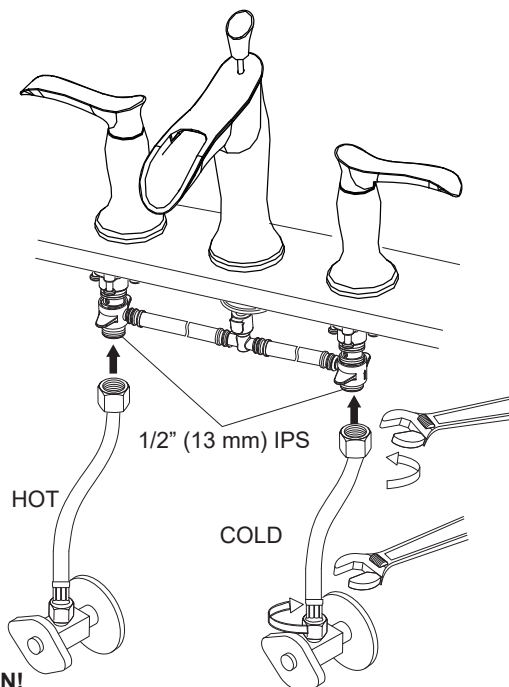

**WARNING:**  
DON'T OVERTIGHTEN!

## Checking and Testing

5

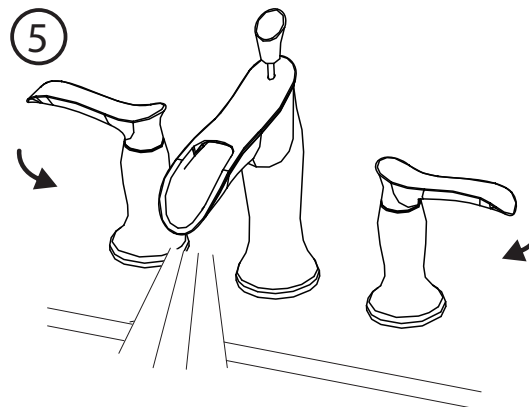


Turn the faucet handle all the way on, turn on hot and cold water supply and flush water lines for one minute. Reinstall aerator by hand

6

Check all connections at arrows for leaks, retighten if necessary.



**BUT DON'T OVERTIGHTEN**

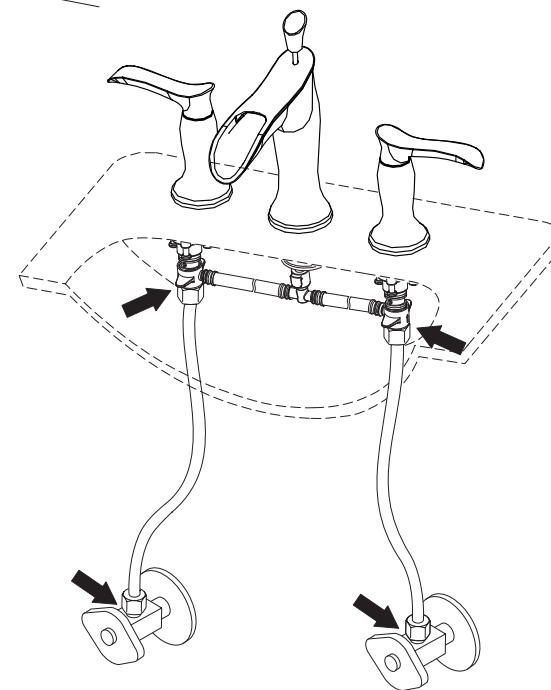

### Maintenance:

Simply rinse the surface with clear water or mild liquid detergents (if necessary). Dry the faucet with a clean soft cotton cloth. Do not use any cleaning agents containing acids polish abrasives or harsh cleaners.

## Cleaning and care

Daily cleaning and care are required in order to keep the product shining and working properly.

1. Clean it with water and dry it with soft cloth.
2. Clean the product with gentle liquid or glass cleaner.
3. Don't use acid cleaner.
4. Don't clean with abrasive material, abrasive paper or knife.

ANCONA



**WARNING**


Ensure hoses are tightly screwed in position as they may move during transportation and installation.



**ATTENTION**

Assurez-vous de bien serrer les embouts de chaque Tuyau car ils peuvent se dévisser lors du transport – bien valider après l'installation aussi


Step 1:  
Unscrew shank

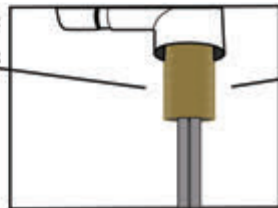

Etape 1 :  
Dévisser la tige filetée

Step 2 :


Ensure hoses are tightly screwed in position as they may move during transportation and installation, do not over tight as this may damage seals

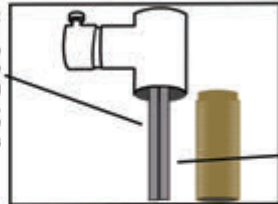

Etape 2 :  
Bien serrer chaque tuyau en position, car ils peuvent se déplacer durant le transport, ne pas trop serrer, pour ne pas endommager les joints statiques


Step 3 :

Screw shank back in place.

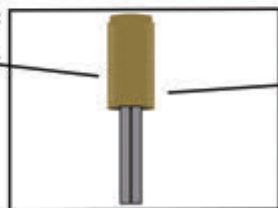

Etape 3 :  
Replacer la tige filetée et initier l'installation

## Parts list

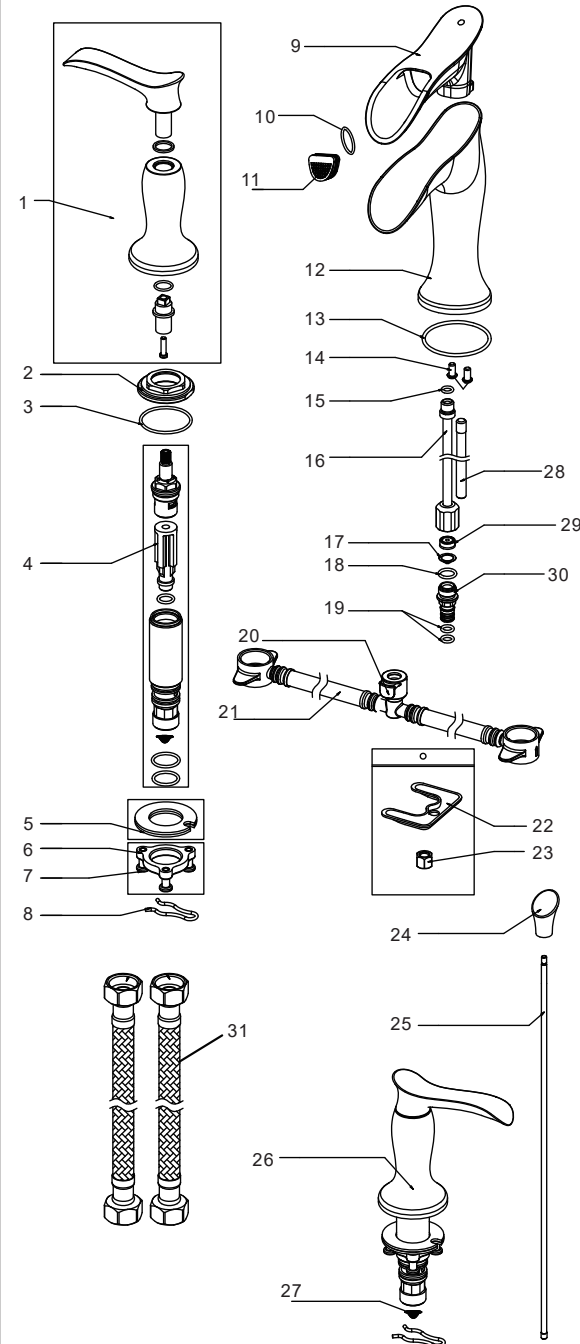

NO.	PART NAME
1	Handle assembly
2	Lock nut
3	O-ring
4	Water valve assembly
5	Gasket assembly
6	Lock nut
7	Screw
8	Clamp spring
9	Spout
10	O-ring
11	Aerator
12	Body
13	O-ring
14	Screw
15	O-ring
16	Copper tube
17	Washer
18	O-ring
19	O-ring
20	Plastic lock ring
21	Flexible hose
22	Clamp
23	Lock nut
24	Diverter cover
25	Lift rod
26	Left connector
27	Screen filter
28	Nut
29	Watersaving piece
30	Connector
31	Flexible hose