



Installation instructions



AN-7700BTG / AN-7700BZG / AN-7700ORB / AN-7700BKORB

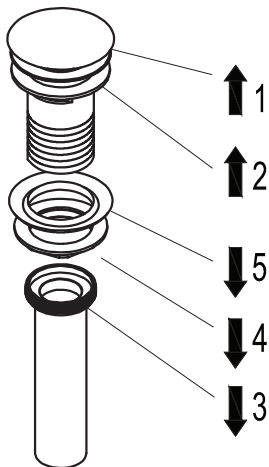

1 Disassemble parts prior to installation.

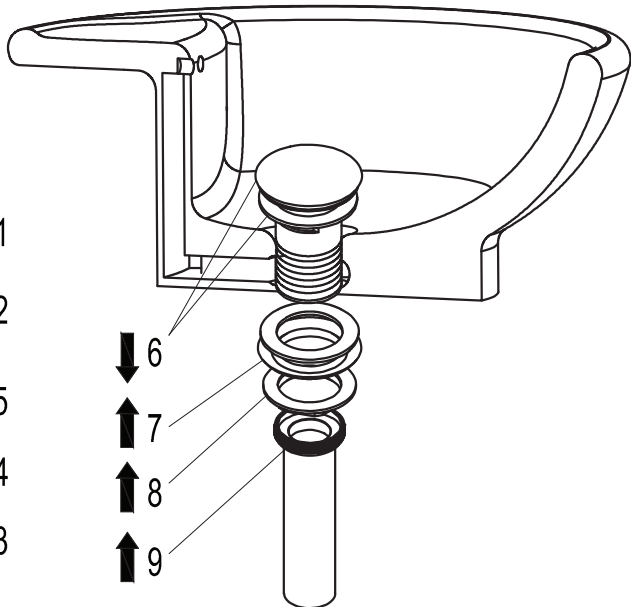

2 Reassemble as shown above.