
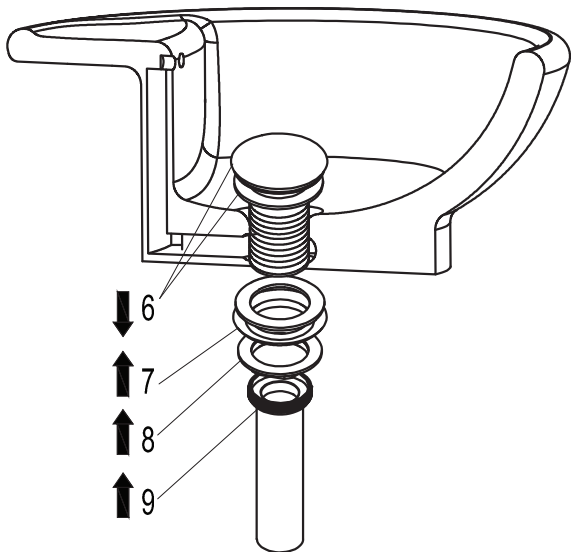


# Installation instructions

AN-7701BTG / AN-7701BZG / AN-7701ORB / AN-7701BKORB

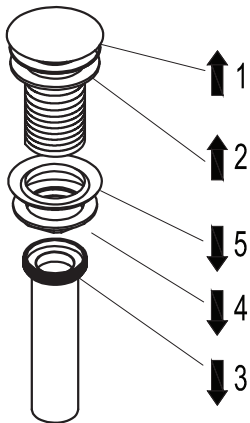

1

Disassemble parts prior to installation.

2

Reassemble as shown above.