


Remove the lower chimney, making visible the PCB box and LED driver on the top



Unplug the right side connection , marked in a circle

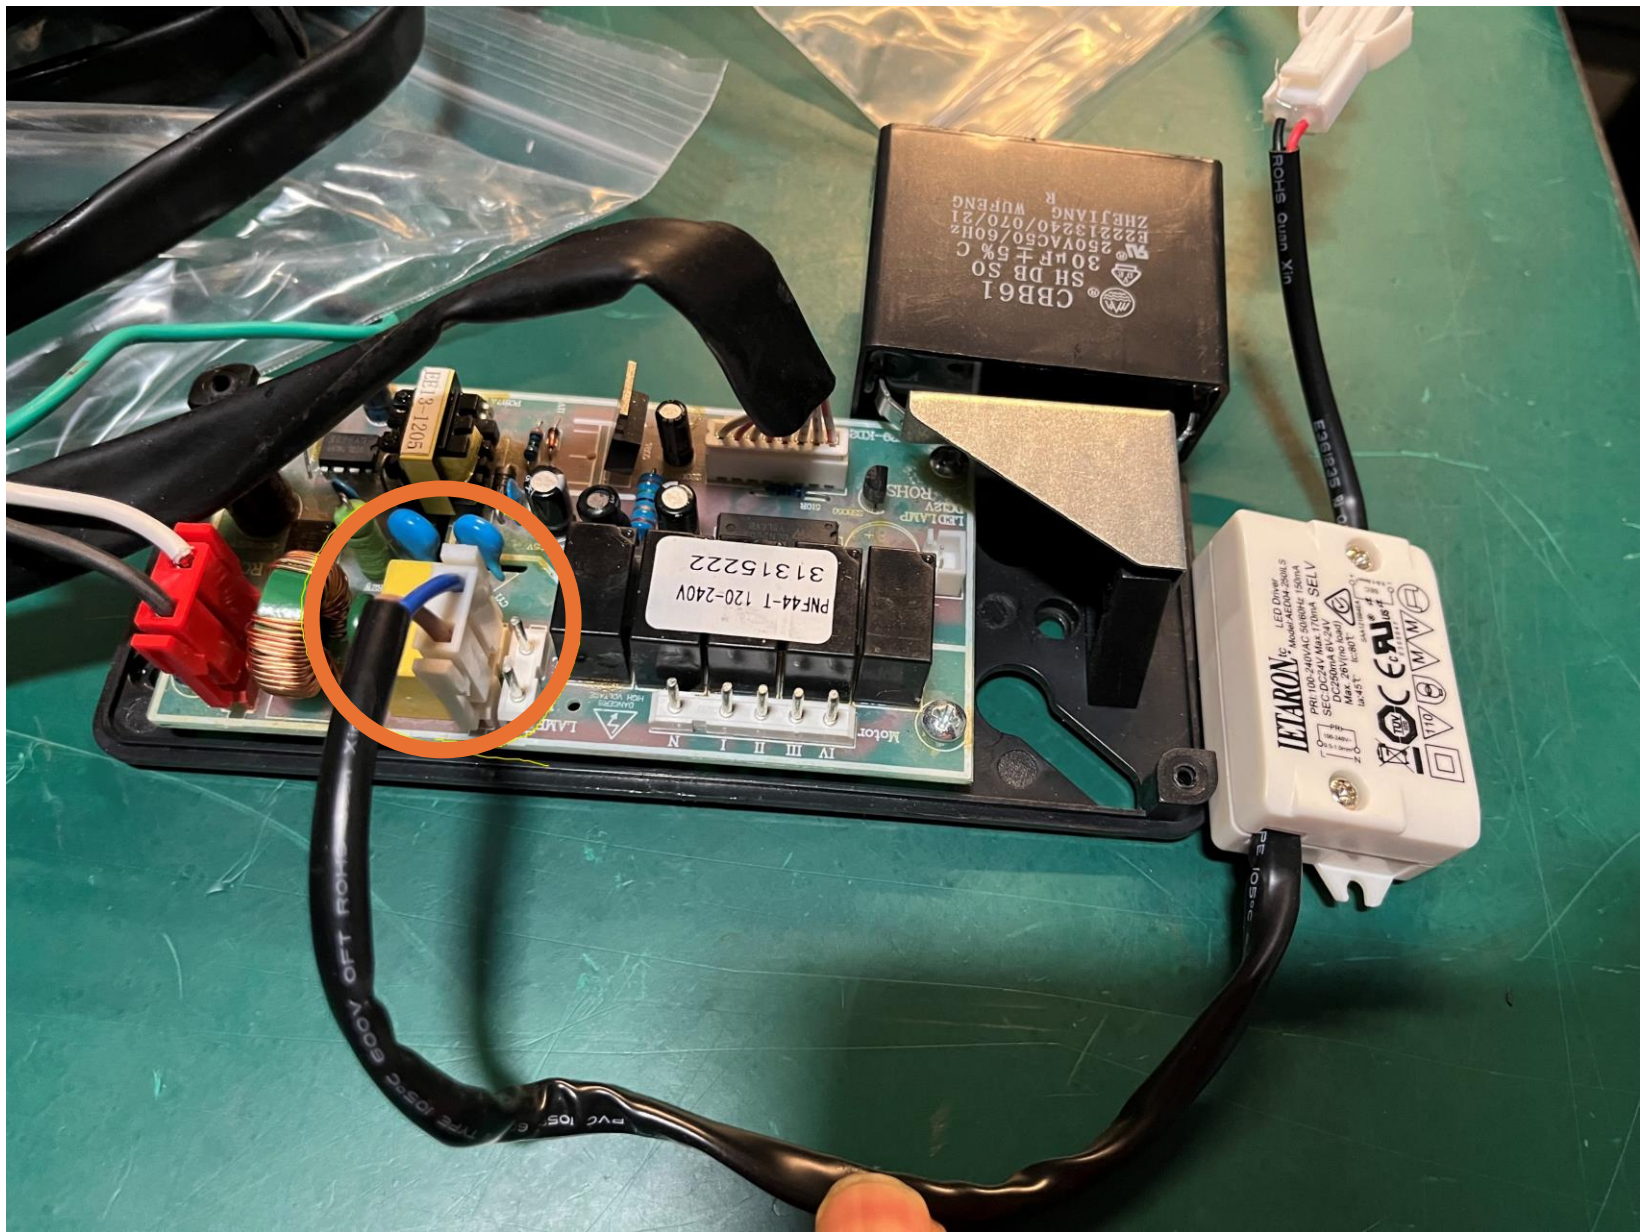

Open the PCB box, and find the other side connection for the led driver

