


Maintenance


Replacing the Light Bulbs

1 Unplug the unit from the AC outlet.

2 Remove five screws from the light panel, then remove the light bulbs by popping them out.

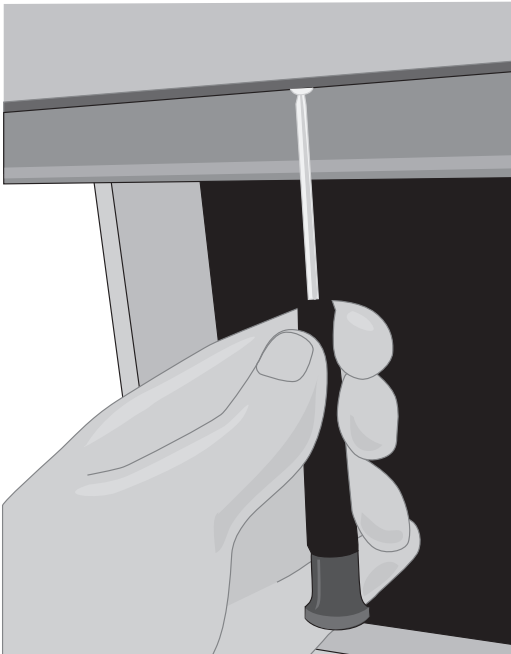

3 Disconnect the light clip.

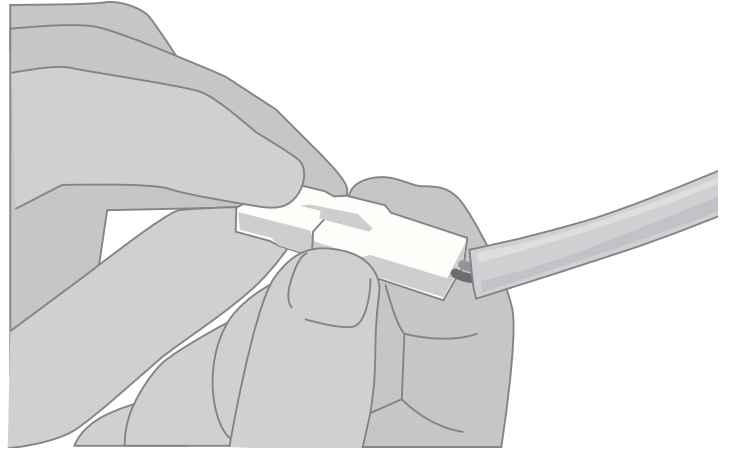

4 Reverse the removal procedures to install the new light bulbs and plug the unit back in.