

# Maintenance

## Replacing the Light Pucks



**IMPORTANT:**


**ALWAYS SWITCH OFF THE ELECTRICITY SUPPLY AT THE MAIN PANEL BEFORE CARRYING OUT ANY OPERATION ON THE APPLIANCE.**

**1**

Make sure the range hood is unplugged or turn OFF breaker.

**2**

Remove filters. Reach into interior of range hood until touching both lateral clips located on the side of the puck light. Gently squeeze and push down until puck pops out from its location, pull out the LED puck and unplug it.

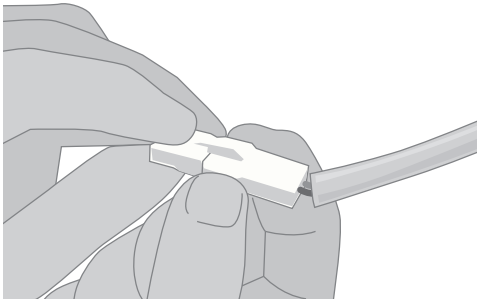

**CAUTION: PUCK MAY BE HOT, PLEASE TAKE OUT THE PUCK WHEN THE PUCK IS COMPLETELY COOL!**

**3**

Replace with a 10.2 Volt, 2.55-Watt max, LED lights. Plug in new puck and push back into light panel.

**4**

Turn ON breaker and range hood to test for operation.

