


Included parts

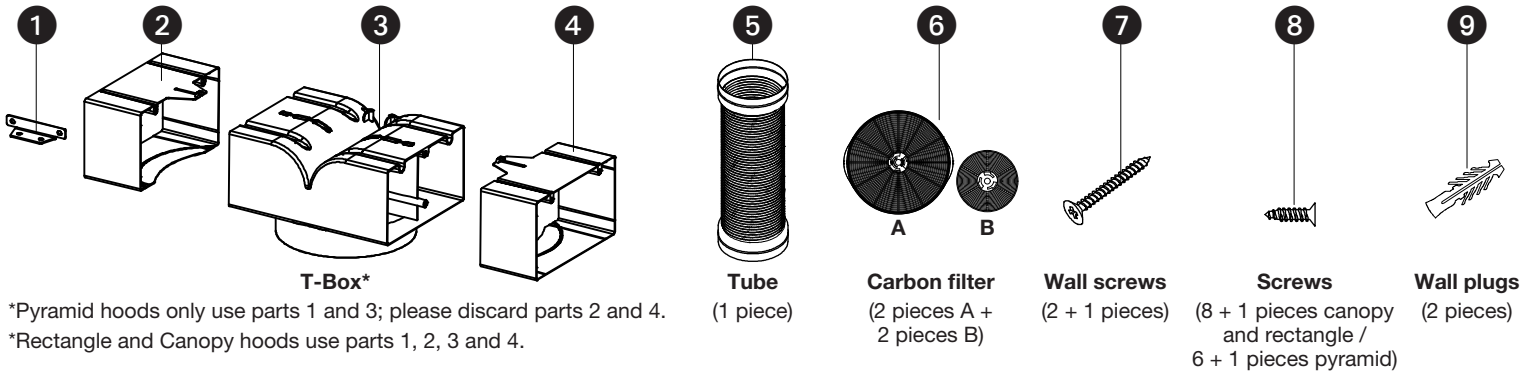

Installation

If range hood is already installed, please remove upper chimney and screws. Keep parts for posterior steps.

- 1** If installing **Rectangle or Canopy hood**, lock parts **2** and **4** to part **3**, with 2 pieces screws **8**. See Fig. #1.
Please skip this step if installing Pyramid hood.
- 2** Lock the bracket **1** to T-box **3**, with 2 pieces screws **8**. See Fig. #2.
- 3** Connect tube **5** to T-box **3**. See Fig. #3.
- 4** Screw the bracket **1** into the wall, with screws **7** and plugs **9**. See Fig. #4.
- 5** Screw upper chimney bracket to wall. See Fig. #5. **Skip this step if bracket is already installed.**
- 6** Screw the chimney to chimney bracket, with parts previously set aside. See Fig. #6.
- 7** Lock the T-box to chimney, with 2 screws **8** on each side. If installing Rectangle or Canopy hood, please see Fig. #7-1, if installing Pyramid hood, see Fig. #7-2.
- 8** Attach the 2 round carbon filters (**A** or **B**, depending on model) onto the range hood. See Fig. #8.

